

**uandksound**

# i4 CONNECT

owner's Manual

**uandksound**  
AWAKEN YOUR SENSES



UandKSound was founded in 2015 with a clear goal: to deliver high quality products with the best value for money. Today, all UandKSound products are designed in Europe and carefully crafted to deliver a level of performance that stands above expectations.



## CONTENTS OF THE BOX

---

i4 Connect Speakers

---

Operating instructions

---

Power cable

---

Speaker cable (3 meters)

---

Remote control/batteries

👁️ We recommend that you keep the original box and packing material for future transportation.

We also recommend that you keep these operating instructions for future use.

 
# SAFETY INSTRUCTIONS



- 
- Unplug this product from the wall outlet before cleaning. Do not use this product near water or moisture. Do not spill liquids on the product. Clean only with a dry cloth.
- 
- Place the unit on a solid surface.
- 
- Do not put it in a closed bookcase or a cabinet that may keep air from flowing through its ventilation openings.
- 
- Do not install near any heat sources, such as radiators, heat registers, stoves or other appliances that produce heat.
- 
- Protect the power cord from being walked on or pinched, particularly at plugs and the point where they exit from the product.
- 
- During Lightning storms, unplug the product from the power source or if unused for long periods of time. This will prevent lightning and power-line surge damage to the product.
- 
- Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please contact the manufacturer to be referred to an authorised service centre near you.
- 
- Do not overload wall outlets, extension cords, or integral power circuits as this can result in a risk of fire or electric shock.
- 
- Never push any object through the product openings, as this can result in fire, electric shock, or damage.
- 
- Use proper power sources. Plug the product into a proper power source, as described in the operating instructions or as marked on the product.
- 
- ⚠ · If there is a Lightning flash with an arrowhead on the product, it's intended to alert the user to the presence of un-insulated "dangerous voltage" within the product, that might be of sufficient magnitude to constitute a risk of electric shock to persons.
- 
- ⚠ · If there is an exclamation point on the product, it's intended to alert the user that there is important operating and maintenance (servicing) information in the user manual.
-

# USAGE, CONTROLS AND CONNECTIONS

## OVERVIEW OF THE BACK PANEL (INPUTS AND CONNECTIONS)

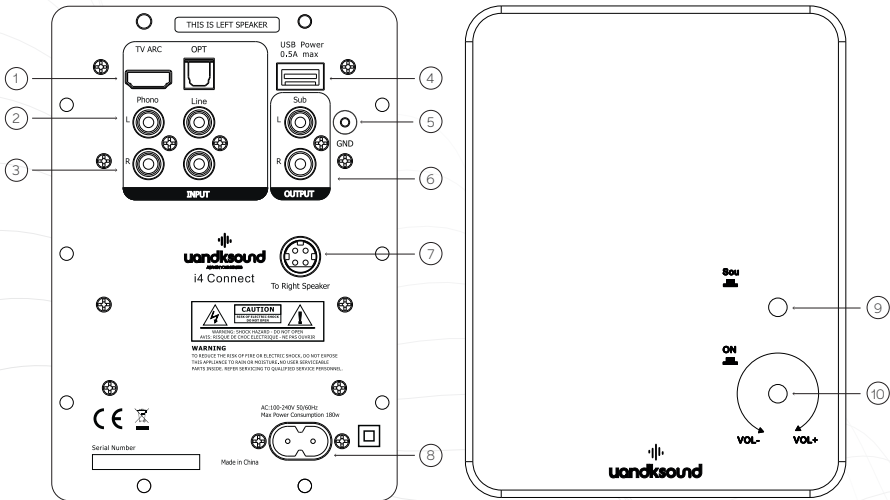

**1. TV ARC:** for TV sound from any TV that supports HDMI ARC (2.048M PCM only). To its right, D1: optical input for digital sources (max 24 bit/96 kHz).

**2. Phono:** line in for turntables only (MM). Connect a turntable, remember to connect “Ground” (7).

**3. Aux:** line in for analogue sources. Connect any analogue audio source with Left/Right cable.

**4. USB power:** charge or power any 5V/0.5A USB device, as well as firmware upgrades.

**5. Ground (GND):** connection for turntable grounding.

**6. Pre-out:** for subwoofer connection, etc.

**7. Speaker output:** connect to the passive speaker.


**8. Power plug:** insert the power cable and connect to an electric outlet

**9/10. Volume/input knob**
 
# USAGE, CONTROLS AND CONNECTIONS

---

## OVERVIEW OF THE REMOTE CONTROL

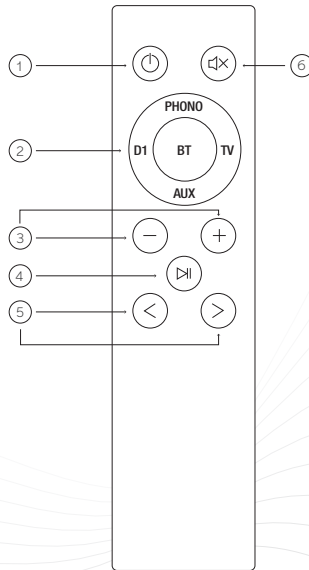

- 
- 1. Power ON/OFF.** Press to turn power on or off.
  - 2. Input selector.** Press to choose your desired input source. Press and hold BT to pair a new Bluetooth device or remove all paired devices if already paired.
  - 3. Volume up/down.** Press to adjust volume up or down.
  - 4. Play/pause in Bluetooth mode**
  - 5. Skip track in Bluetooth mode.** Press to skip track forward or backwards.
  - 6. Mute or un-mute the sound.** Press to Mute or un-mute the sound.
-

## QUICK START

---

1. Connect the speakers using the included speaker cable.
  2. Connect the power cord into an electric outlet and into the back of the left speaker (which has the amplifier). The LED light on the loudspeaker will turn on.
  3. To pair your Bluetooth device, turn on the speakers and press and hold 'BT' on your remote control for about three seconds, until the LED starts blinking. Your speakers are now in pairing mode. Activate Bluetooth on your playback device and scan for devices. Your speaker will show up as "i4 Connect". Press "pair" and you're connected. The LED light on the speaker will change to solid blue. You're now ready to start listening to music!
  4. Besides Bluetooth, your i4 Connect speakers have four more inputs: TV ARC, D1, AUX and Phono. i4 Connect will automatically switch between the inputs, but you can also use the included remote control to select your desired input.
  5. When using the TV ARC input, you might need to set the digital sound output on your TV to PCM. Consult your TV manual to see how.
  6. When connecting a turntable to the Phono input on the i4 Connect speaker, remember to also connect the ground wire from the turntable to the metal GND screw (if applicable).
  7. If you have an active subwoofer, connect it to the i4 Connect speaker's Pre-out, using the RCA cable and then connect the cable to your subwoofer.
  8. We recommend a running-in time of your i4 Connect speakers of approximately 15-20 hours at normal listening level before you decide the final positioning of the speakers.
-

## SPECIAL FUNCTIONS AND FEATURES

---

### **APU (Auto Power Up)**

When the i4 Connect speakers receive input from any connected source, they will automatically power on (if powered off) and switch to the right input. This is called Auto Power.

Note: this will not happen if the speakers are already powered on and playing from another source.

---

### **Bluetooth unpairing**

You can always press and hold the 'BT' button to remove all Bluetooth connections. Please note that Bluetooth pairing is only available when the Bluetooth-input is selected.





## SPECIFICATIONS

---

2-way active speaker system with built-in 4 channel Class-D Amplifier	
Bass reflex system	
Output power	2 x 60 watts (woofers), 2 x 25 watts (treble)
Frequency range	55-22.000 Hz ( $\pm$ 6dB)
Tweeter	0.75" soft dome with neodymium magnet
Bass/midrange driver	5.25" Bass/midrange driver
Energy usage in standby	<0.5 watts
Inputs	TV ARC, optical digital, L/R analog stereo-in (RCA), phono (MM), wireless Bluetooth 5.3
Outputs:	Pre-out, 5V/0.5A USB-charge
Auto power on/off on inputs incl. Bluetooth	
Dimensions	15.5 x 24.7 x 20 cm (WxHxD)
Weight	7.2 kg (set)
Colors	Matte white with silver trim rings

---



 


The background features a series of light blue, wavy lines that create a sense of motion and depth. In the center, there is a prominent waveform in shades of blue and purple, resembling a sound wave or a frequency spectrum. The overall aesthetic is clean, modern, and technical.


# LOUDSPEAKERS TECHNICAL SHEETS

# i4 CONNECT

## IMPEDANCE VS FREQ

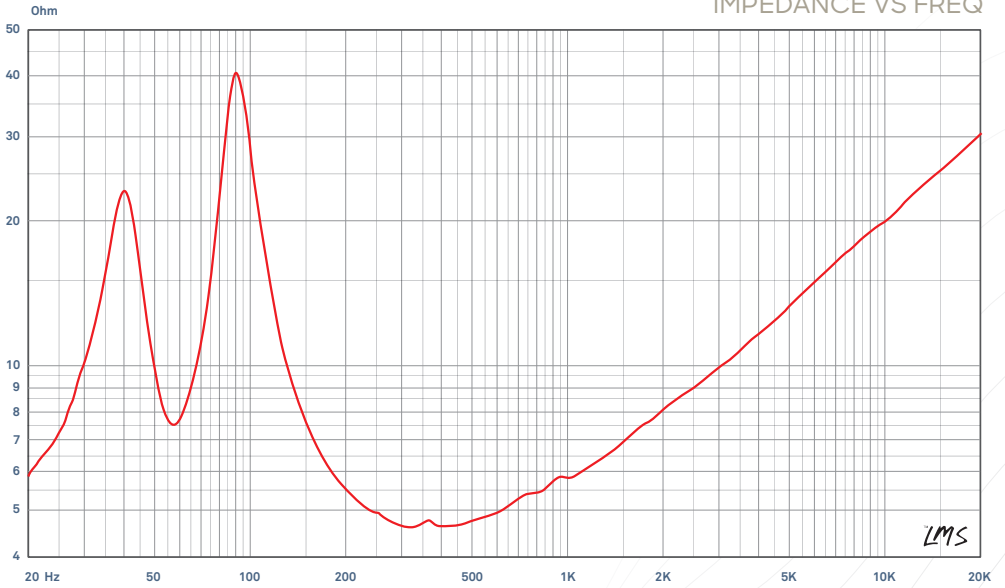

## SPL VS FREQ

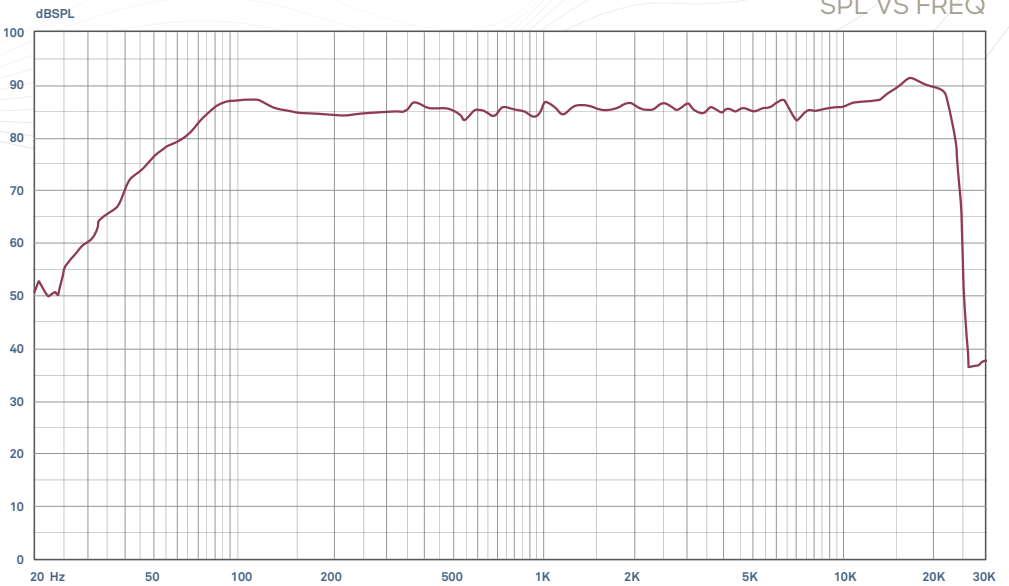 



## WARRANTY INFORMATION

UandKSound products are constructed by industry experts and are thoroughly tested before shipment. UandKSound passive products are warranted for a period of five (5) years and active electronics, three (3) years. This warranty is limited to manufacturer defects, either in materials or workmanship. UandKSound is not responsible for any consequential or inconsequential damage to any other unit or component or the cost for installation or extraction of any component of the audio system. In the rare case of a product failure, please contact your place of purchase or contact your UandKSound dealer for help.

## WARRANTY LIMITATIONS

 
There are no other warranties, either express or implied, which extend the foregoing, and there are no warranties of merchantability or fitness for any particular purpose. The warranty will not cover incidental or consequential damage due to destructive or improper use of products. This includes but is not limited to burnt voice coils, overheating, bent frames, holes in the cone, or broken lead wires. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Non-Warranty Service: if non-warranty service is required the product may be sent to the company for repair/replacement, transportation prepaid.




Thanks for purchasing our products.  
Please contact your nearest official distributor to know more details  
about the warranty conditions and installation best practices.  
You can also contact us by visiting:  
[www.uandksound.com](http://www.uandksound.com)



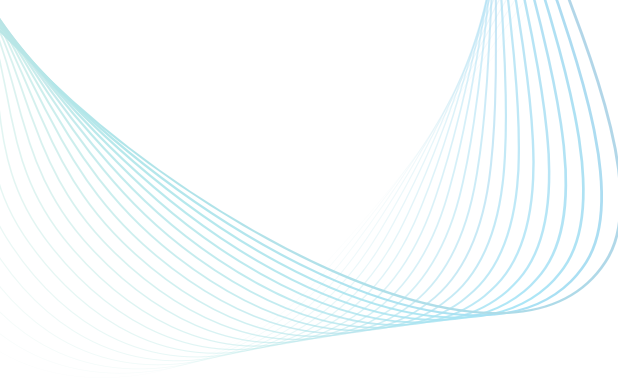

**uandsound**

 AWAKEN YOUR SENSES

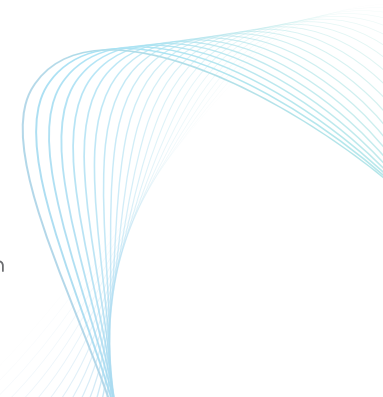

[www.uandsound.com](http://www.uandsound.com)